



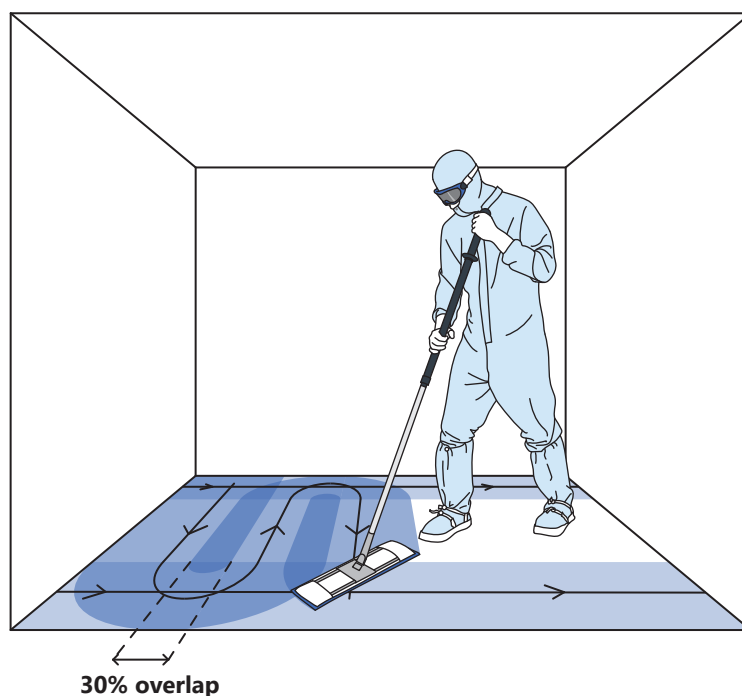

- Mop the two edges either side of your cleanroom area.
- To reduce contamination, avoid stepping on any cleaned areas.
- Mop across your cleanroom area using an s-shape. Keep lines as neat as possible.
- Overlap paths by 30%.

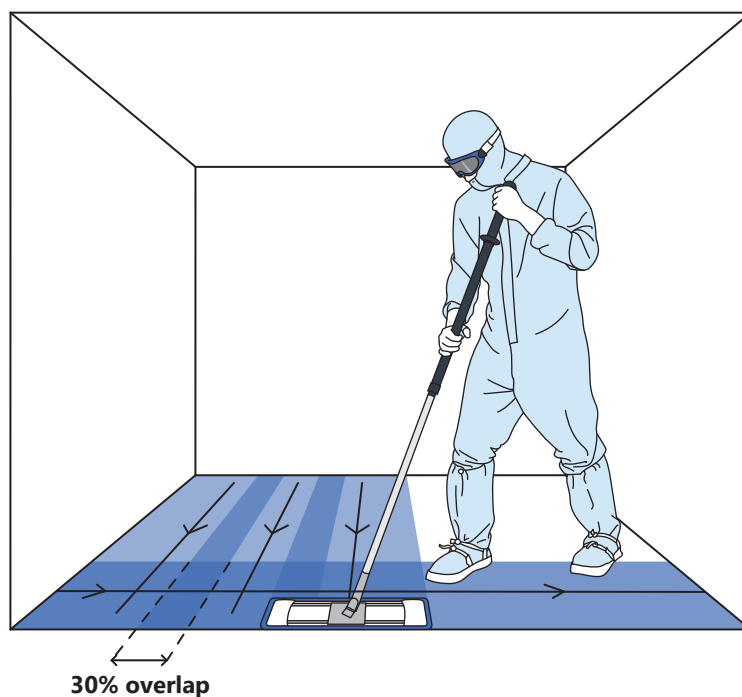

- Place your mop at the edge of your cleanroom area and mop across a straight line.
- Repeat the straight lines, ensuring paths overlap by 30%.
- To reduce contamination, avoid stepping on any cleaned areas.
- Finally mop along the edge of the room.



W: www.micronclean.co.uk
T: +44 (0)1754 767377
E: SalesEnquiries@micronclean.co.uk



micronclean
QUALITY TODAY - INNOVATION TOMORROW