

## INSTRUCTION FOR ATTACHING THE LENS TO THE GOGGLES FRAME


### 1 Inspect the Lens and Frame

Ensure the lens is clean and free from damage. Identify the correct orientation of the lens by matching the shape of it to the groove on the frame.




### 2 Align the Lens with the Frame

Hold the lens at a slight angle to match it with the frame's slot. Ensure that any notches or tabs on the lens align with the corresponding slots in the frame.

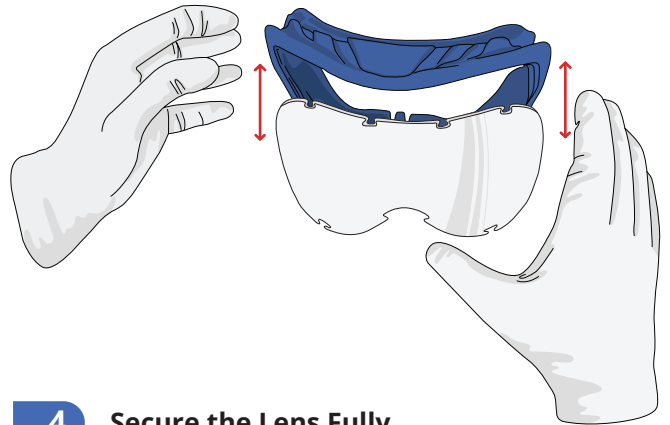


### 3 Insert One Side First

Start by inserting the **Left hand side** of the lens into the frame groove. Gently press it inward so that it partially fits into place. Insert the **Right hand side** of the lens into the frame groove. Gently press it inward so that it partially fits into place.

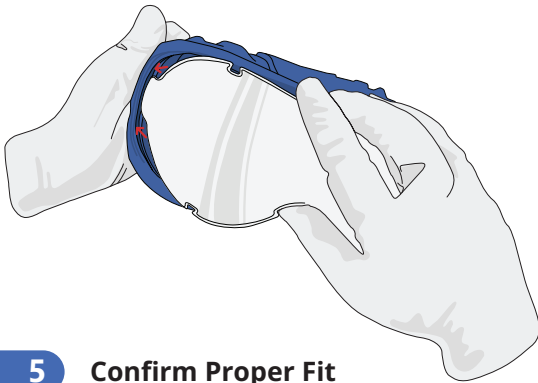

### 4 Secure the Lens Fully

Gradually press along the edges while working your way around the lens. Apply light but firm pressure to ensure the lens snaps securely into the frame.

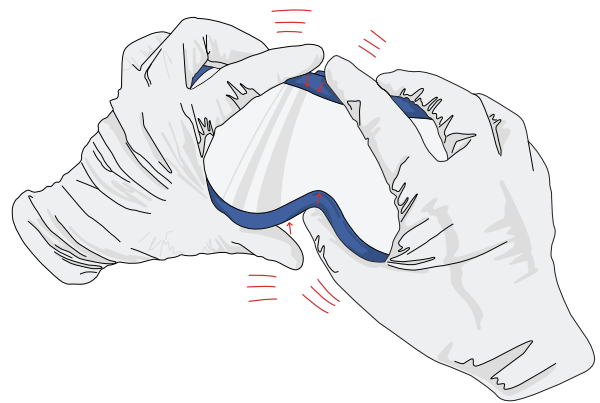

### 5 Confirm Proper Fit

Check that the lens is fully seated in the frame with no gaps. Lightly press around the edges to ensure it's locked in place.

