


# REUSABLE CLEANROOM SOCK SERVICE

---



## CLEANROOM SOCK SERVICE

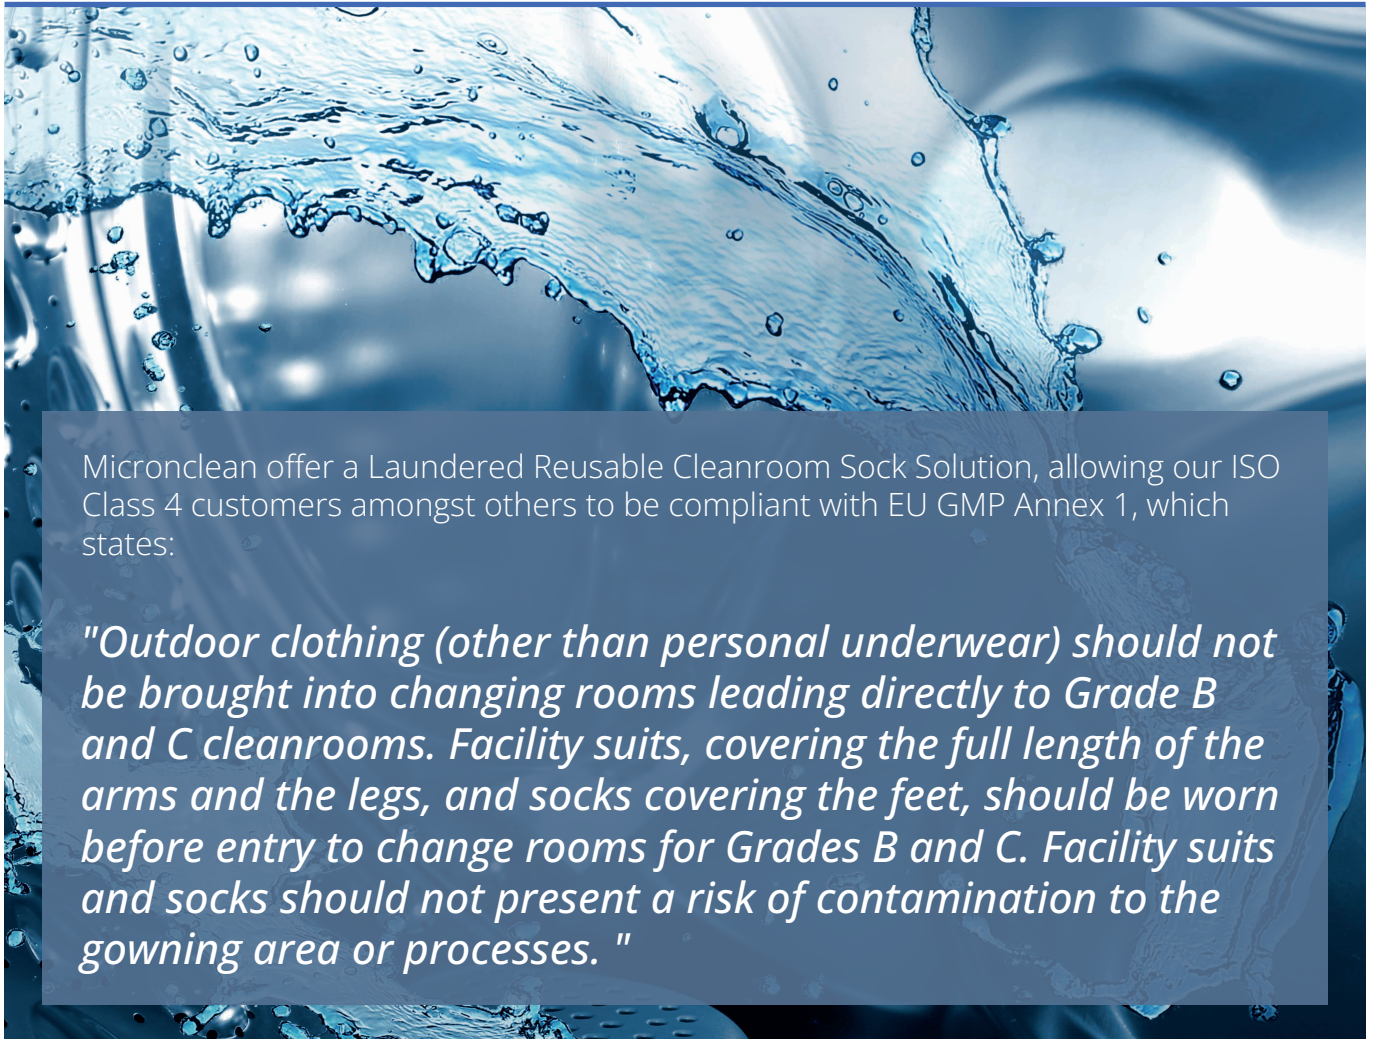

**The Micronclean Reusable Sock service is tailored to your needs and is;**

- Designed specifically for cleanroom environments.
- Fully compliant with the requirements detailed in EU GMP Annex 1.
- Able to offer a major reduction in waste going to landfill compared with single use disposable socks.
- Fully compatible with our Protrack garment tracking system as each sock is RFID tagged.


**Alongside this the sock itself has not been forgotten in that it offers:**

- Micronclean logos to support simple visual checks that show if the correct socks are being worn.
- Increased wearer comfort by being 'sock' shaped.
- Availability in three colour coded sizes to again generate long term wearer comfort.
- Polyester blend fabric giving:
  - a soft feel
  - high levels of breathability
  - superb moisture wicking

---

## CLEANROOM SOCK PROCESSING

---

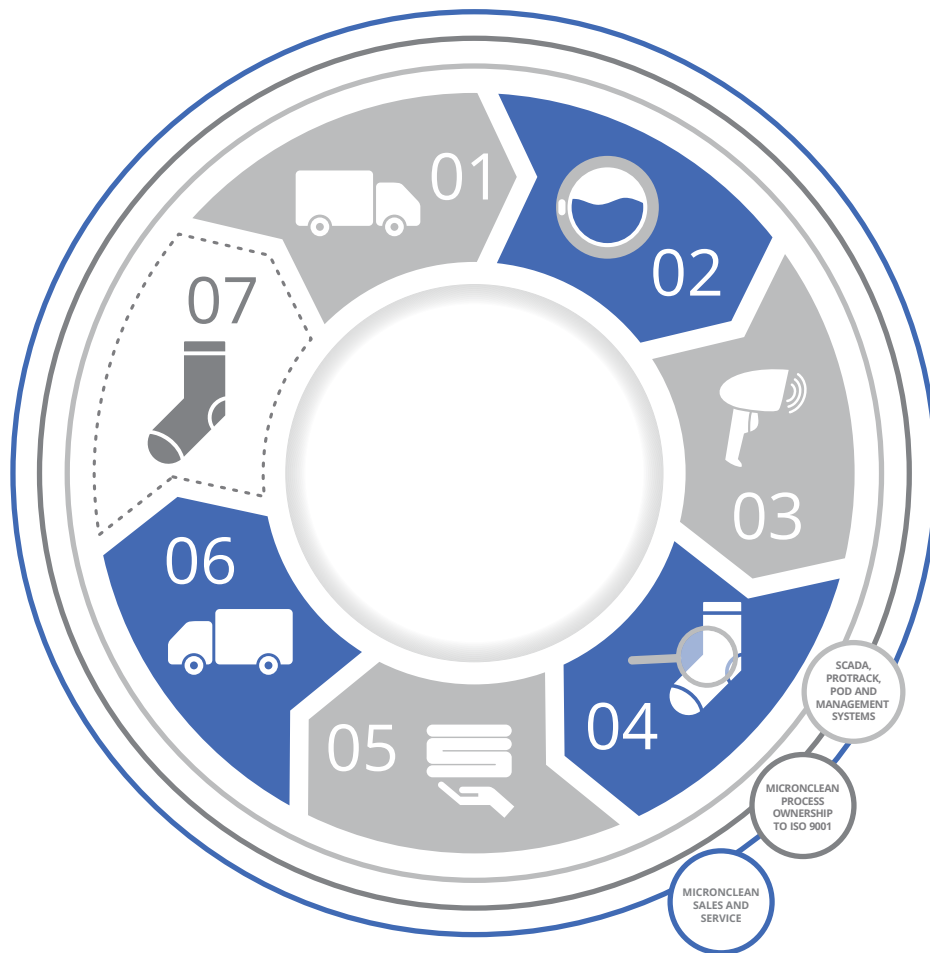

- 01. Return of Soiled Socks** - Used socks are returned to us in their own dedicated uniquely coloured webknot bag.
- 02. Washing and Drying** - All socks are washed and tumble dried in accordance with RABC principles to ensure the thermal disinfection and cleanliness of the returned socks.
- 03. Scanning In** - All returned socks are scanned into ProTrack before being inspected.
- 04. Inspection** - The dry socks are inspected against pre-defined criteria and the replacement of non-conforming products is triggered at this point.
- 05. Packing** - Dry, inspected socks are packed into single sized sealed polythene packs of up to 50 socks, placed in the dedicated sock webknot bag ready for delivery.
- 06. Transport of Clean Socks** - The clean socks are returned as part of our delivery service alongside your existing undergarments.
- 07. Wearing** - Socks are ready for use.

### CLEANROOM SOCK SERVICE

Our Cleanroom sock service is based on customer feedback and delivers sized packs of up to 50 socks alongside your existing undergarment service.

### ISO CLASS 4 PROCESSING

Our Cleanroom sock processing is based on our existing UK best practice for cleanroom undergarments and delivers cleanroom socks that are processed through one of Micronclean's ISO Class 4 GMP Class B barrier laundries.

*"At Micronclean our passion is to be the first to develop new technological solutions that change the shape of the markets we serve, creating quality and efficiency for our customers."*

With a heritage dating back 140 years, Micronclean is the largest family laundry in the UK. Micronclean has for the past 35 years positioned itself to become the specialist supplier of contamination control products and services to the cleanroom industry. As a result, we provide specialist cleanroom laundry services to companies in the pharmaceutical, medical device, healthcare, biotechnology, electronic and aerospace industries.

In addition, Micronclean are unique in the UK laundry market in that we operate a UK in-house Research and Development team. This team has a primary focus of taking ideas or requirements derived from our customer needs and developing them into new products or services that can be launched. In addition, it is also heavily involved in the incremental improvement of existing products, services and internal systems that are necessary to maintain our position of market leadership.



ISSUE 2 | DATE 30/01/2023 | Ref MAR-008



Roman Bank | Skegness | Lincolnshire | PE25 1SQ | UK  
T: +44 (0)1754 767 377  
E: sales@micronclean.co.uk  
W: www.micronclean.com

